



Pagetek MK4

10/5 Zone Paging Transmitter, DC Version



Installation & User Manual

PREFACE

Important Installation Information

It is the purchasers' responsibility to determine the suitability of this equipment and its derivatives for any given application, Scope cannot give specific advice in this manual, as each use will require independent evaluation.

Scope has, wherever possible, employed extra safeguards to monitor the system's performance. Certain system installations, operational requirements or budgets may, however, limit the effectiveness of these safeguards. Again, the suitability of the system for any given application must therefore be decided by the installer and their customer, relative to the application and risk.

Good working practice dictates that a suitable system installation log must be generated, together with a record of the dates when the system has been manually checked, (with the aid of signal strength meters etc.) enabling the system performance to be compared with the original installation data.

Scope has no control of the use and application of the frequencies issued by OFCOM. Some equipment that is licensed may have greater protection than other equipment which is operated on a WT Act License Exempt basis.

The supply of this equipment is governed by our standard terms and conditions of sale, which can be found on the reverse of all order acknowledgements*, proforma invoices*, delivery notes, price lists and invoices. Alternatively, these can be provided on request.

* Faxed or emailed proforma invoices and quotations refer to "conditions available upon request".

Important Safety Information

Scope products are designed to operate safely when installed and used according to general safety practices. The following requirements should be observed at all times.

Do NOT subject this equipment to:

- Mechanical shock
- Excessive humidity or moisture
- Extremes of temperature
- Corrosive liquids

This equipment is designed for indoor use, unless expressly stated otherwise, and must not be used in classified Hazardous Areas, including areas containing explosive or flammable vapours, unless express authorisation has been given in writing by the manufacturer. If in doubt, consult your local product dealer for further information.

Do not obstruct any slots or openings in the product. These are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.

Only use a damp cloth for cleaning (not liquid or aerosol based cleaners), and ensure that any power is removed from the unit prior to beginning the cleaning operation.

PageTek MK4 DC Power Version

Preface

Important Safety Information

Removal of covers from the equipment must only be undertaken by authorised service personnel, who must ensure that power is isolated prior to removal.

Installation

Installation must only be undertaken by an Approved contractor, who shall ensure that all work is carried out in compliance with IEE Wiring Regulations. For mains powered equipment, a readily accessible isolating fuse or switched socket must be located within 1 metre of the equipment.

No User Serviceable Parts

Alteration or modification to any part of this equipment, without the prior written consent of the manufacturer, will invalidate all Approvals and Warranties attaching to the equipment. Further liability for the operation of the equipment, under the applicable law, will pass to the user, who will absolve the manufacturer of any further responsibility for its correct operation and use.

Hereby, the manufacturer Scope Communications UK Ltd declares that the radio equipment type: PageTek PT4512V, PT41012V, PT4524V, PT41024V, is in compliance with Radio Equipment Directive 2014/53/EU and ROHS Directive 2011/65/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.scope-uk.com/technical/doc/DOCPT.pdf or from Scope at: Quantum House, Steamer Quay, Totnes, TQ9 5AL United Kingdom.



Do not discard. At end of life this equipment must be sent to an authorised waste treatment centre. Contact Scope at the above address for further details.



© Scope Communications UK Ltd, 2017 All Rights Reserved

Pagetek MK4 DC Power Version

System Overview

The Scope PageTek PT4-5-12V & PT4-10-12V are 12V dc powered*, programmable radio paging systems which can be used to transmit both text and numeric messages direct to pocket pagers carried by individuals or entire groups.

*24V dc input units also available, model codes PT4-10-24V and PT4-5-24V. Consult our Sales team for further details.

The unit is supplied with either 5 or 10 inputs, which can be hardware configured to accept either dry contact (no voltage) or voltage (5-18V dc) triggers. Each input is pre-programmed as either N/O (Normally Open), N/C (Normally Closed) or C/S (Change of State). Triggering any of the inputs (zones) will result in a pre-programmed message (up to 80 characters) being transmitted to the selected pager or group of pagers.

The unit can be programmed to repeat transmit (1-5 repeat transmissions or until reset) if required. In addition, the trigger filter time can be defined between 100 milliseconds and 25 seconds (period for which the zone must remain in the active state before triggering). One input (IN9) can be configured as a Reset to clear any current transmission cycles. This can also be used as an "Arm/Disarm" facility for the alarm inputs. Various other parameters can be programmed to suit specific user requirements.

The Configuration Data sheets accompanying your system will detail how all the various parameters have been set. It is vital that you retain this information in a safe place as you will need to quote the unit's serial number in the unlikely event that you experience any problems. You will also need this information to order more pagers (these must be matched to the identity of your system).

For advanced users who wish to program the unit themselves, a Programming Kit must be purchased. This provides a Windows based application running on a PC's USB port, allowing all functions to be programmed and stored in the system's secure non-volatile memory. Full details can be found in the PT10 Pro Configuration Utility provided on CD with the Programming Kit.

Note ! This system requires a valid OFCOM licence for operation in the UK. It is the user's responsibility to apply for a radio licence on form OFW432 Business Radio Light Licence Application Form, available online at <https://secure.ofcom.org.uk/busrad/>

The relevant clauses on the OFW432 form should be completed as follows:

Section A - Purpose

Select "A new Business Radio Simple Site Licence"

Section C

You will need to enter your national grid reference. This can be obtained from an Ordnance survey map, GPS unit or from various websites.

One example is www.freemaptools.com/convert-postcode-to-ngr.htm

Further information: Scope Sales team 01803 860700. OFCOM 020 7981 3131 or 0300 123 1000.

Section 1: Installation

The information contained in this Section is intended for authorised system installation engineers only. Other personnel should not undertake installation of this equipment under any circumstances.

Siting of the hardware

Before locating the hardware in any given location, it is important to take into account the range of operation that you require. The standard transmitter can quite easily provide ranges of up to a mile or more, covering a considerable area with just a quarter wave antenna connected directly to the unit. For coverage of very large sites, or where exceptionally difficult operating conditions exist, it may be advantageous to install an external antenna. Installing the transmitter on the second or third floor of a building will more often than not boost overall range. However, horizontal range is not always required as

Pagetek MK4 DC Power Version

much as propagation through a multi-storey building. Here it may be more useful to use a small external antenna mounted externally at half the building height. Sometimes range is required more in one direction than in the other: moving the aerial to one side of the building can provide a bias in the required direction, which may overcome the range difficulties. (See section: **Other Antennas**).

Important: coaxial feeds which are longer than 5 metres must employ low loss 50 ohm coax. We normally do not recommend feeds of more than 15 metres for standard applications. If in doubt, contact our technical department for further advice.

A further consideration is the length and location of the input cables. To avoid interference and possible false triggering, cable runs should be kept to a minimum (ideally less than 10 metres) and should be isolated from other cabling (e.g. mains, telecoms. PC networks, etc).

Some major points to consider when installing equipment:

- 1 Never install antennas near or adjacent to telephone, public address or data communication lines or overhead power cables.
- 2 Avoid, where ever possible, running antenna coax alongside other cables.
- 3 Avoid mounting the transmitter in the immediate vicinity of telephone exchanges or computer equipment.
- 4 Always use **50 ohm** coaxial cable between the antenna and the transmitter. If cable runs exceed 5 metres, always use low loss 50 ohm cable such as RG213 or UR67.

Coaxial cable intended for TV, Satellite or CCTV installations is normally 75 OHM and therefore totally unsuitable for any transmitter installation manufactured by Scope.

- 5 Also remember that the performance of the system will be affected by the type of material the unit is mounted on and its surroundings.

The following is a list of materials that this transmitter will be adversely affected by if mounted on or if mounted in close proximity to:

- a) Foil back plasterboard
- b) Metal mesh or wire reinforced glass
- c) Metal sheeting, large mirrors or suspended ceilings
- d) Lift shafts

All of the above can reflect radio waves and thereby reduce the capability of the transmitter to perform its desired functions.

- 6 The circuit boards within this equipment may be harmed by Electrostatic Discharge (ESD). Installers should ensure that both themselves and the system's chassis are grounded before beginning any installation, and should ensure that adequate anti-static procedures are adhered to at all times.
- 7 **Warning!** Never transmit without an aerial attached to the transmitter
- 8 **Warning!** Carefully check the **Installation** section in this manual covering terminal connections prior to installation. Damage caused by incorrect connection is the responsibility of the installer!

PageTek MK4 DC Power Version

Installation

The following procedure must be adhered to when installing the PageTek system. Ensure you have taken into consideration all of the above information before selecting the location for your transmitter. If in doubt, call our technical helpline on 01803 860710.

- 1 Remove the cover from the PageTek transmitter unit by slackening the four Pozi head screws located at the top and bottom of the unit (see Diagram 1).
- 2 Carefully lift off the cover and set aside.
- 3 The transmitter should be fixed to an even wall surface using suitable screws fitted through the three holes provided in the chassis plate. Hold the chassis up to the chosen location and with the aid of a pencil mark the position of the mounting holes.

Warning: Do not use the chassis plate as a template for drilling the holes into the wall. Hammer drills vibrating through the chassis may irreparably damage the quartz crystals on the printed circuit boards.


- 4 Place the PageTek transmitter over the mounting holes and secure the unit with suitable screws. Check that the chassis plate does not bend and that the screws do not snag or pinch any of the internal cables.
- 5 Connect the antenna to the unit via the BNC connector located at the top of the housing. If the antenna is an external antenna, or an antenna which is separate from the transmitter unit itself, ensure that the previous criteria covered under the section headed **Siting of the Hardware**, have been strictly adhered to (also see section headed **Other Antennas**).
- 6 Connect the input cables to the zone terminals. Unless the unit has been specifically configured for voltage input, these should be simple "dry" (no voltage) contacts only (i.e. isolated switch or relay contacts). If configured for voltage input (5-18V dc), the jumper link beside the relevant terminal must be positioned nearest the "V" symbol marked on the circuit board (see Diagram 2). **If in doubt, check with Scope before proceeding; incorrect connection may cause permanent damage.**
- 7 For continuous DC power (i.e. derived from mains power), connect the DC power input leads to the +/- terminals of J1 (Diagram 2). **Input Voltage: 12 to 13.8V dc @ 1A regulated.**
- 8 For battery-derived DC power systems, connect the DC input leads to the "BATT" connector CN17. The red Power indicator lead from the front cover of the unit should also be unplugged from CN2 (PWR LED) and plugged into CN4 (BAT LED). This will flash every 10 seconds to conserve power, rather than staying on all the time.
- 9 A relay output is provided to indicate loss of external DC power (only where input power is connected to J1). If required, connection can be made to J14 terminal block (see Diagram 2), using either N/O or N/C terminal and the Common terminal. The relay is energised when external supply is present and drops out when external power is lost. Relay max contact rating is 1A @ 60V dc **and must not be exceeded.**
- 10 Replace the cover and re-tighten the four retaining screws.
- 11 With power correctly applied, the red Power indicator on the front panel will light (or flash if configured for battery power) and a "PageTek Reset" message will be sent to the pager(s) to indicate successful initialisation.
- 12 The system is now active and will transmit the pre-programmed message for each of the zones when triggered. Repeat transmissions and other programmed parameters (e.g. battery low message) will be identified on the Configuration Data sheet(s) supplied with the system. Low battery voltage is set at 10.5V by default.

Pagetek MK4 DC Power Version

Installation


WARNING!

The circuit boards contain static sensitive components. Care should be taken to avoid contact wherever possible and anti-static precautions should be observed during installation.

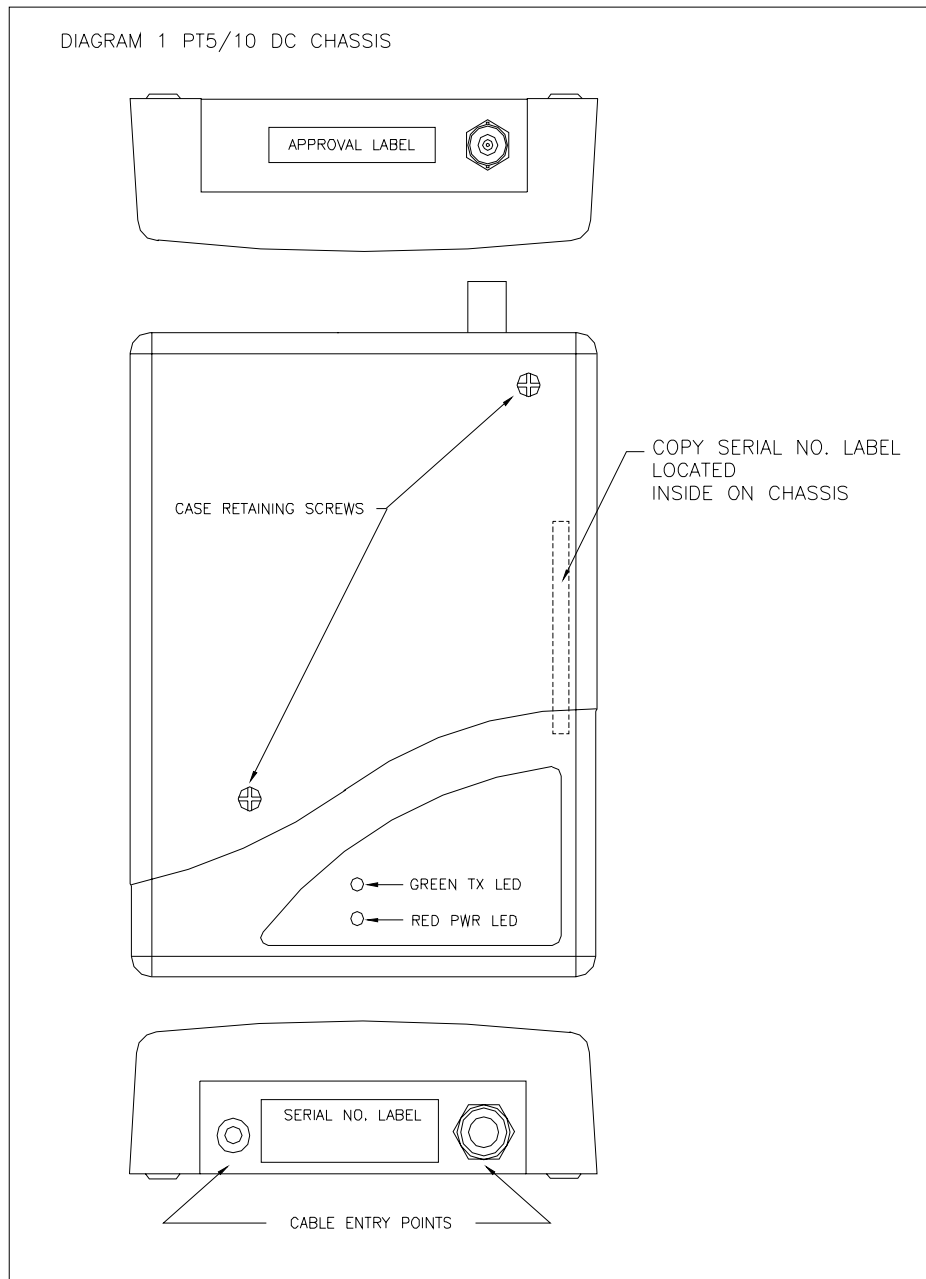

Pagetek MK4 DC Power Version

Diagram 2: wiring interconnect

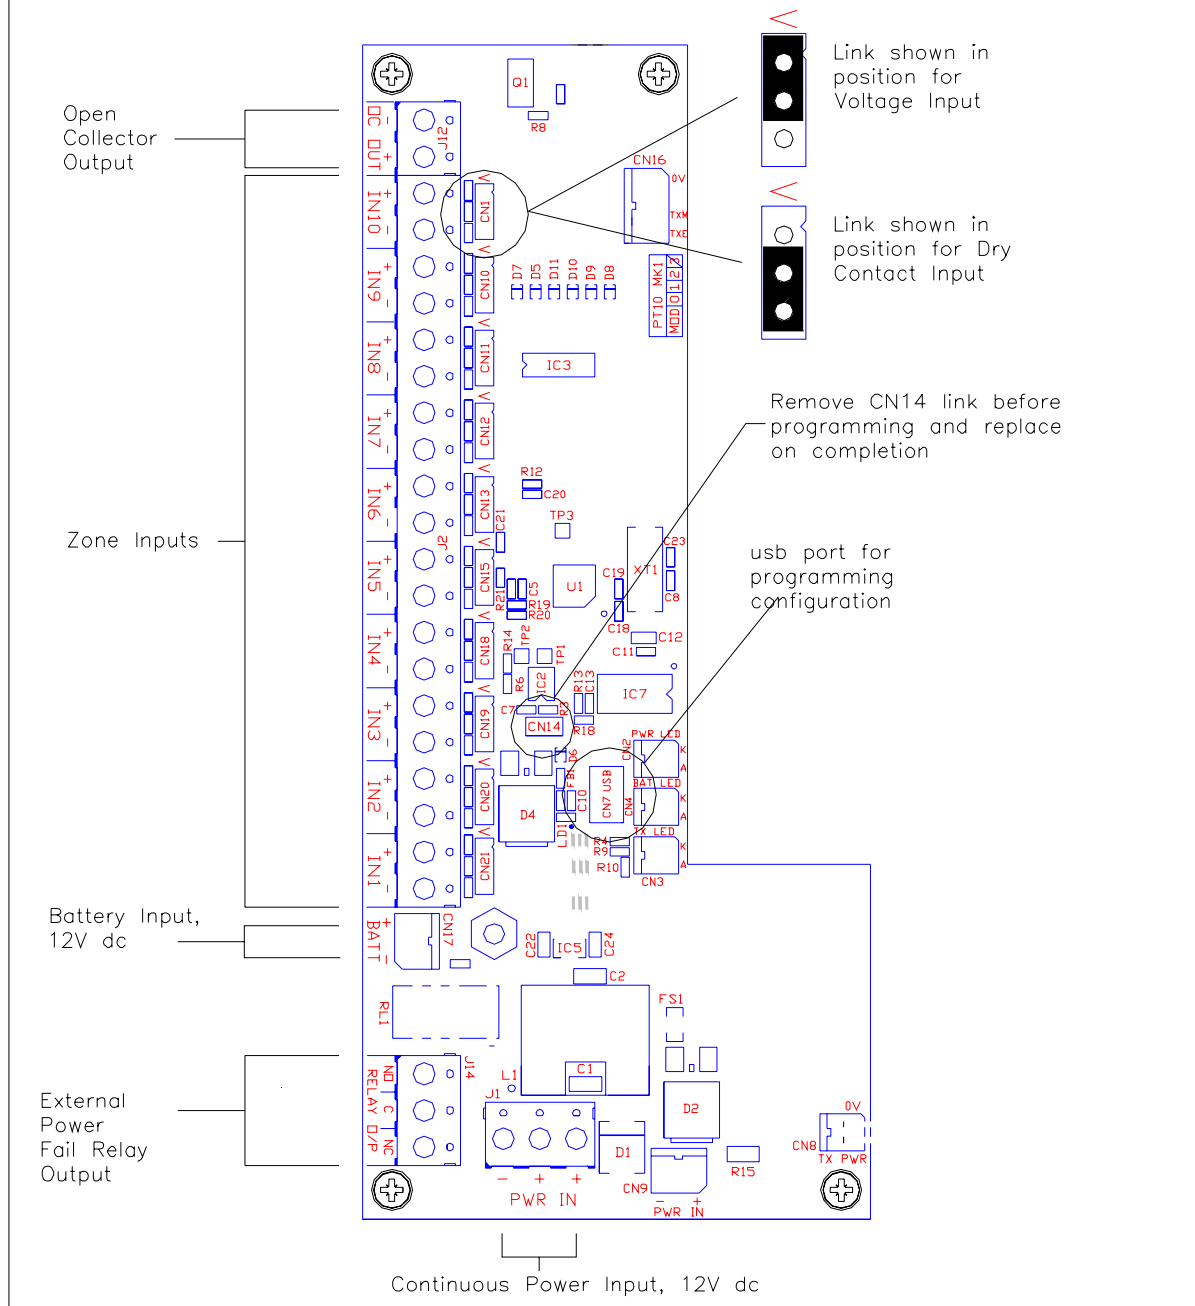

Section 2: System Operation

Confirmation of power connection is by way of the red PWR indicator on the front panel.

Confirmation of transmit is by way of the momentary green TX indicator on the front panel.

When any zone is changed to it's active state, the pre-programmed message for that zone will be transmitted to the receiver(s). Repeat transmissions can be programmed for added security, these will be detailed on the Configuration Data sheets provided with your system.

Where the system has been configured for voltage input:
volts present = an open input, no volts = a closed input.

The siren output is an "open collector" type switching to ground. It may be used to switch up to 24V dc @ 1A max. Note that if it is used to switch a relay, a suitable diode must be connected across the relay coil (stripe towards positive side of coil).

Problems and Fault Finding.

- 1 Check that the input cables are connected to the active zones. For a 5 zone unit, these are the lowermost terminal blocks on the main PCB (see Diagram 2).
- 2 Check the Configuration Data sheet supplied with the system to confirm the active (trigger) state of each input i.e. Normally Open, Normally Closed or Change of State.
- 3 If your system has been configured for Dry Contact operation, ensure that no voltage is present on the input cables. Also check that cable runs are not excessive (preferably less than 10 metres) and are not in close proximity to other mains or telecoms cabling.
- 4 Check that the receivers are at least 3 metres from the transmitter and aerial. Under certain conditions it is possible to flood the receivers and corrupt the data received.
- 5 Check that any portable receivers have the battery installed with the correct polarity and are correctly powered up.
- 6 Check that the red power indicator is lit (or flashing if configured as a battery powered system). If check the external power supply and input lead.
- 7 Check that the green TX indicator lights for the duration of the transmission. If not, go back to the cabling and re-check the terminal connections.
- 8 Check that the aerial is correctly installed.

Pagetek MK4 DC Power Version

Other Antennas

The range and performance of this equipment can be improved by the addition of more efficient antennas*. These can be installed either inside or outside the building and are connected to the transmitter with 50 OHM coaxial cable.

The centre fed half wave dipole antenna, measuring approximately 12 inches from tip to tip, will provide excellent all round local signalling. This can be mounted either inside or outside a building. Two versions are available:

- 1) a light duty antenna suitable for sheltered environments/internal installation (LUHFDP).
- 2) a heavy duty stainless unit with optional mounting hardware for more arduous applications (UHFDP).

Pre-terminated coaxial feeder cables are available for 5, 10 or 15 metre requirements.

Note ! High frequencies can equate to high power losses. Always use quality cable. RG58 is only acceptable on cable runs of up to 5 metres. We recommend RG213, or equivalent, on greater lengths. If in doubt consult your dealer.

**subject to license conditions, specifically, mounting height and Effective Radiated Power (ERP).*

Service Information

For all Service enquiries, call (01803) 860740.

Record your system details here for quick reference:-

Date supplied ____/____/____ Serial Number of the base console _____

Transmitter frequency ____Mhz

Number of pagers supplied with the system _____

System base ID number _____ Transmitter baud rate _____

For information on individual pager types, refer to the appropriate pager manual

Pagetek MK4 DC Power Version

System Specification

Input Voltage: Models PT4-10-12V & PT4-5-12V: 12 to 13.8V dc
Power Consumption: <300uA (micro Amp) standby, 800mA transmit

Models PT4-10-24V and PT4-5-24V: 24 V dc
Power Consumption: 15mA standby, 800mA transmit

Transmitter (all models):

Power output: 1W max

Frequency Range: 446-464 MHz*

Channel Spacing: 25 KHz (On-Site Paging) or 12.5 KHz (SRD)

TX Baud Rate: 512 or 1200

RF Standards applied: EN 300 224 V2.1.1 (2017-06)

EMC Standard applied: EN 301 489-2 V2.1.0 (2017-03)

Safety Standard applied: EN 60950-1:2006 + A2:2013

*subject to licencing conditions

General:

Ports: 5 or 10 dry contact/voltage inputs (configurable)
Open Collector (siren) output: 1A max
Relay output for Power Fail indication
USB port for programming function only

Footprint (mm): •184 (L) x 138 (W) x 45 (D) max

•excluding aerial

Scope's policy is one of continuous development and specifications are subject to change without prior notice