

Menus



Message Box

Manage received messages (Read, lock, delete).



Ring Mode

Choose between audible (normal) and silent/vibrate alerts.



Settings

Change font size (zoom), set the date/time, use the torch feature (flash LED).



Shut Down

Power off the Epoc-S.

Unit configuration will affect menu availability. Please contact supplier for further information.

Icons



Signal Strength

Shows the strength of the last received message.



Audible Mode

Received messages will beep and vibrate.



Silent/Vibrate Mode

Received messages will vibrate only.



Unread Message

There is at least one unread message in memory.



Battery Level



Main Menu

How to use

Power on: press and hold the power key for 5 seconds.

Power off: press menu, go to "Shut Down", press Enter, select "Yes" and press Enter.

Read a message: from the main screen, select a message on the display with the left/right arrow keys and press Enter. Or from the menu choose "Message Box", then "Received Msg", select the required message and press Enter.

Lock / Delete a Message: With the message displayed, press Enter, choose "Locking" or "Delete" and press Enter.

Layout

Information Banner



Safety cord attachment

